



Me 262 B-1a/U1

メッサーシュミット Me262B-1a/U1 德国Me 262 B-1a/U1战斗机

PLEASE READ BEFORE OPERATION!

- * Tools recommended as below: (Not included)
Adhesives; Paints; Side Cutters; Sharp Edged Pliers; Modeling Knife; Modeling File; Nippers; Drill; Scissors; Sand Paper; Soft Cloth; Cyanoacrylate Glue.
- * Make sure to read this instruction listed below before assembling.
- * The kit contains the small parts, they can be dangerous if swallowed by mistake, so keep them away from reach of children.
- * Cut the all parts off carefully and remove the waste parts into the garbage can.
- * More caution and care should be needed for cutting and handling the photo etched parts.
- * Make attention that some parts should be attached the decal when assembled.
- * During assembling, please tear up and throw away the plastic bags, or may cause the dangerous if wearing over head by children's mistake.
- * When using the adhesives and paints, please do not use them in the closed room or near the fire, also must be very careful to protect your eyes, face and clothes.
- * Adult supervised when assembled by children under 14 years old.

装配前请仔细阅读:

- * 推荐使用的模型工具(请自备):
专用模型胶水, 专用模型油漆, 水口剪刀, 长咀钳, 刀片, 锉刀, 镊子钳, 钻, 剪刀, 软布, 砂纸, 瞬间快干胶等。
- * 用水口剪刀或刀片小心切下所有塑胶零件和蚀刻片零件, 不要遗失小零件。
- * 切取蚀刻片时应特别注意防止利边划伤手指。
- * 用模型锉刀小心锉平所有零件表面的注射浇口。
- * 用适量的强力快干胶水粘合蚀刻片零件和金属轴, 切忌过量, 否则可能导致可动零件被粘住。
- * 注意某些零件表面需在装配时同步贴水上贴纸。
- * 制作时应远离幼儿并将包装袋及时收妥, 谨防小孩玩耍而引起意外。



cyanoacrylate glue
强力胶



weight
配重



make hole
钻孔



cut / remove
切除



option
选择



no cement
不涂胶水



decal
贴纸



bend
弯曲



repair
填补












The method to apply the decals

1. Cut off the decal from the decal paper and put it into the warm water 40℃ for 10 seconds.
2. Take the decal from the water and put it on a piece of clean cloth.
3. Remove the decal slowly from the paper to the targeted location by a wet finger.
4. Use a piece of dry and soft cloth to press it gently on the decal until it getting dry and no bubble existing.


水贴纸的使用方法:

- 一. 把相关的印花从水贴上剪下, 放入40℃左右的温水中浸10秒。
- 二. 然后将印花放在干净的布上。
- 三. 拿上印花纸板, 手指蘸水将印花移到适当的位置。
- 四. 用软干布轻压印花直至水干, 气泡消失。

部品图 Parts

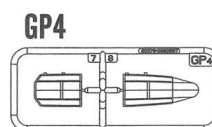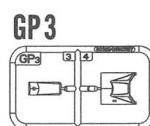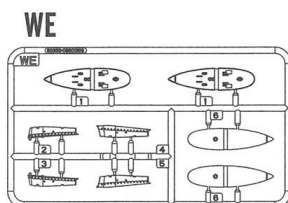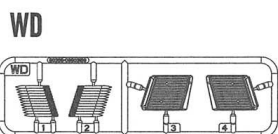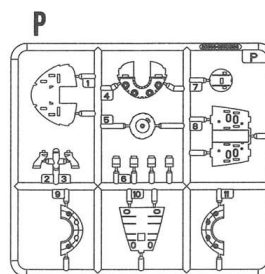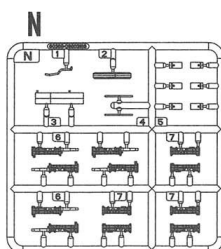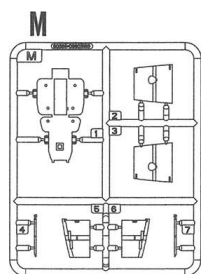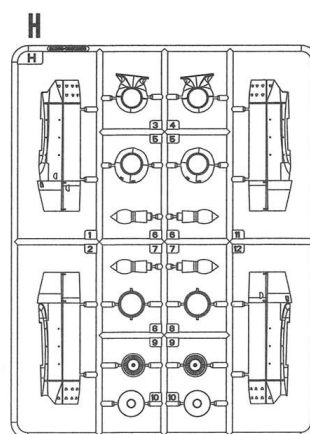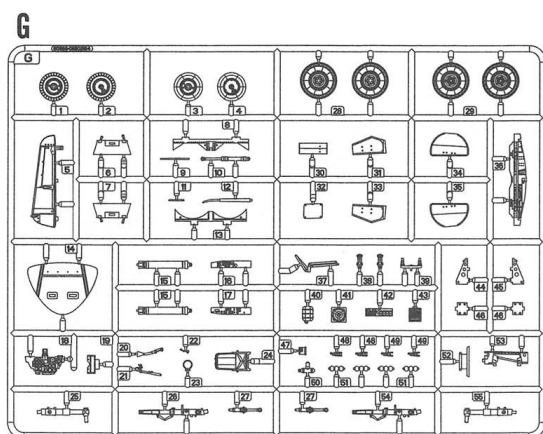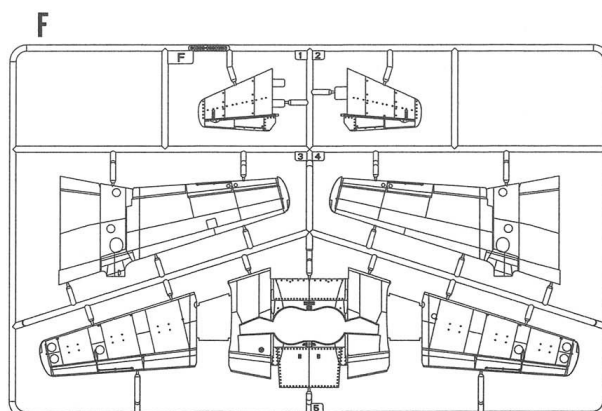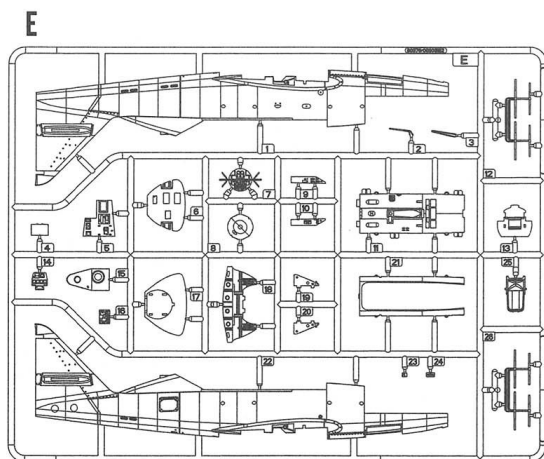


《金属部件》
Metal part



不用的部件: M1 P5 P7 P9
Unused parts G52

《水贴》
Decal

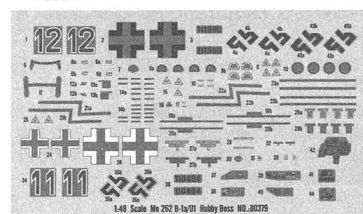

1
STEP

H 81 55

卡其色
Khaki

《座椅》I
Seat

G44

E13

G24

H 116
黑灰色
RLM66 Black Gray

G45

H 116
黑灰色
RLM66 Black Gray

《座椅》II
Seat

E19

E25

E20

E17

《座椅》I
Seat

《座椅》II
Seat

H 81 55
卡其色
Khaki

Decal
贴纸

42

H 12 33

对侧相同
Both sides

消光黑
Flat black

G20

G19

E11

Decal
贴纸

39

对侧G16 G17
Opposite G16

G43

Decal
贴纸

40

对侧 E10
Opposite E10

E9

Decal
贴纸

37

Decal
贴纸

38

G21

G14

G37

G13

E18

2
STEP

《机枪》I
Machine gun

H 18 28

黑铁色
Metal Black

N5

P6

制作两组
Make two

N6 + N7

H 8 8
银色
Silver

《机枪》II
Machine gun

N5

P3

N6 + N7

《机枪》III
Machine gun

N5

P2

N6 + N7

《机枪》I
Machine gun

P8

P1

《机枪》III
Machine gun

P4

H 70 60
德国灰
RLM02 Gray

对侧M4
Opposite M4

M7

H 77 137

胎黑色
Tire Black

Option
选择

G3 + G4

G26

Option
选择

G54

H 18 28

黑铁色
Metal Black

H 8 8
银色
Silver

G1 + G2

H 70 60
德国灰
RLM02 Gray

H 70 60
德国灰
RLM02 Gray

P10

《金属部件》
Metal part


E7

H 8 8

银色
Silver

H 70 60
德国灰
RLM02 Gray


G10

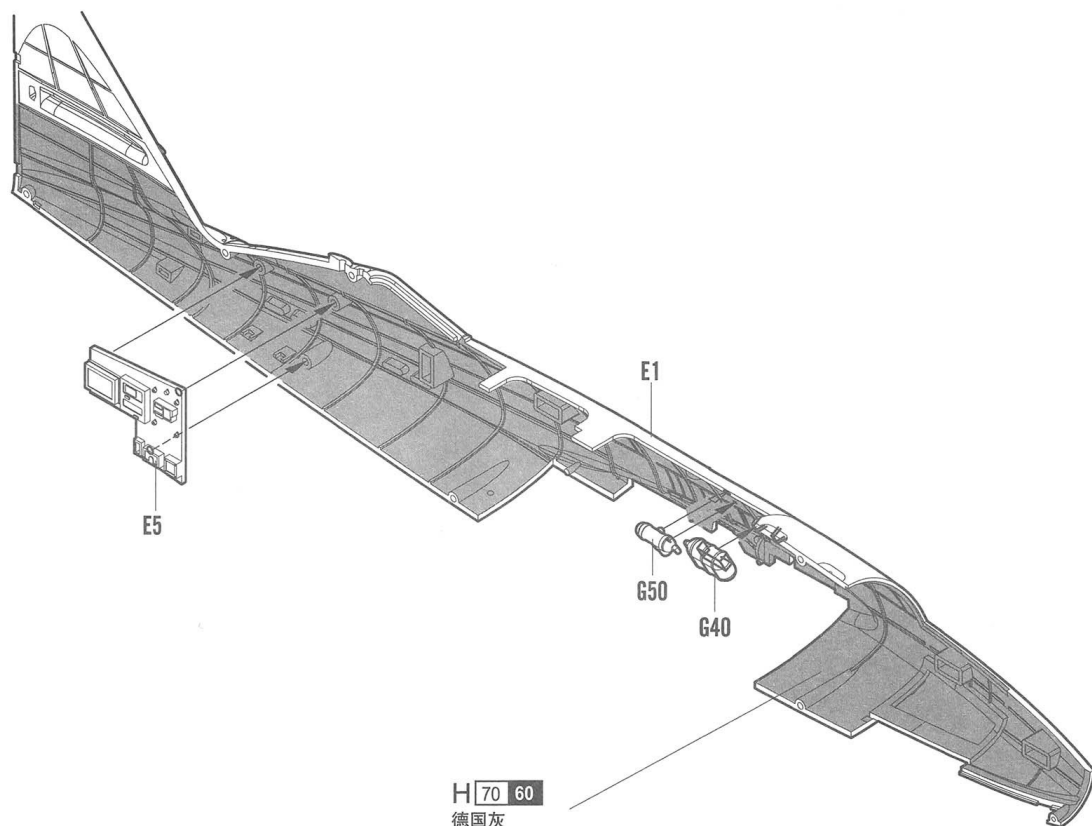


H 70 60
德国灰
RLM02 Gray

H 113
黄色
RLM04 Yellow

G51
制作2组
Make two

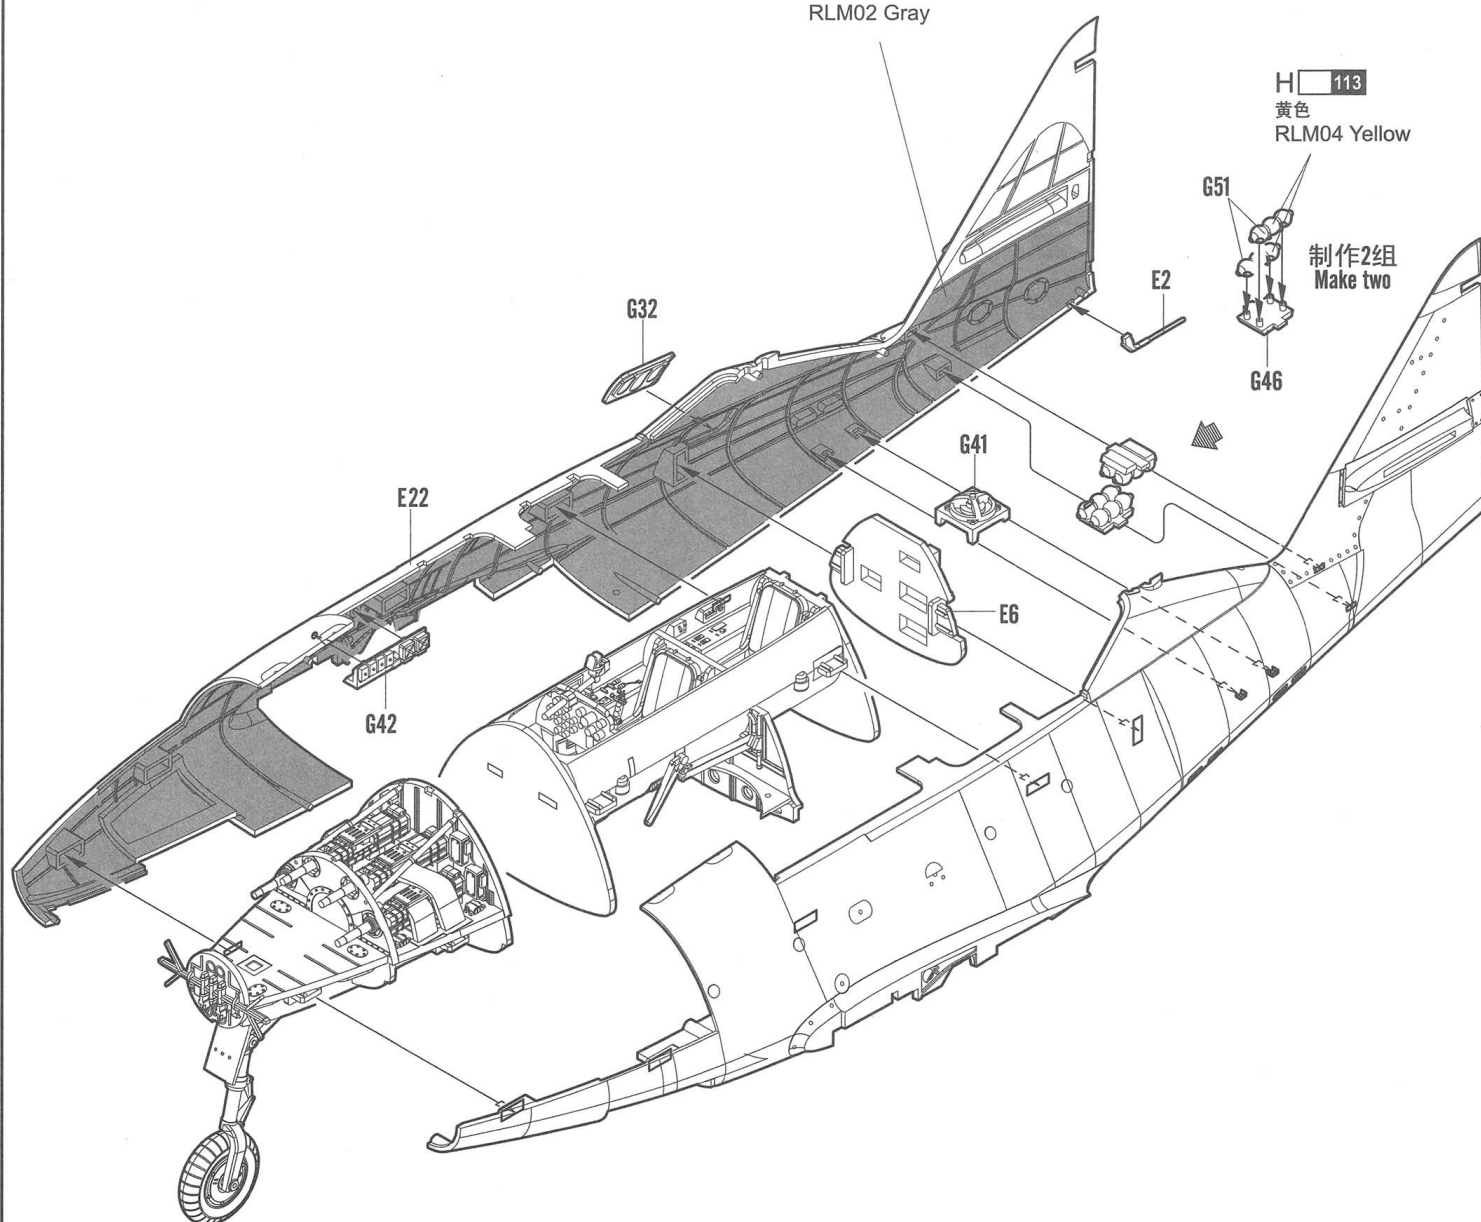


Make holes
钻孔

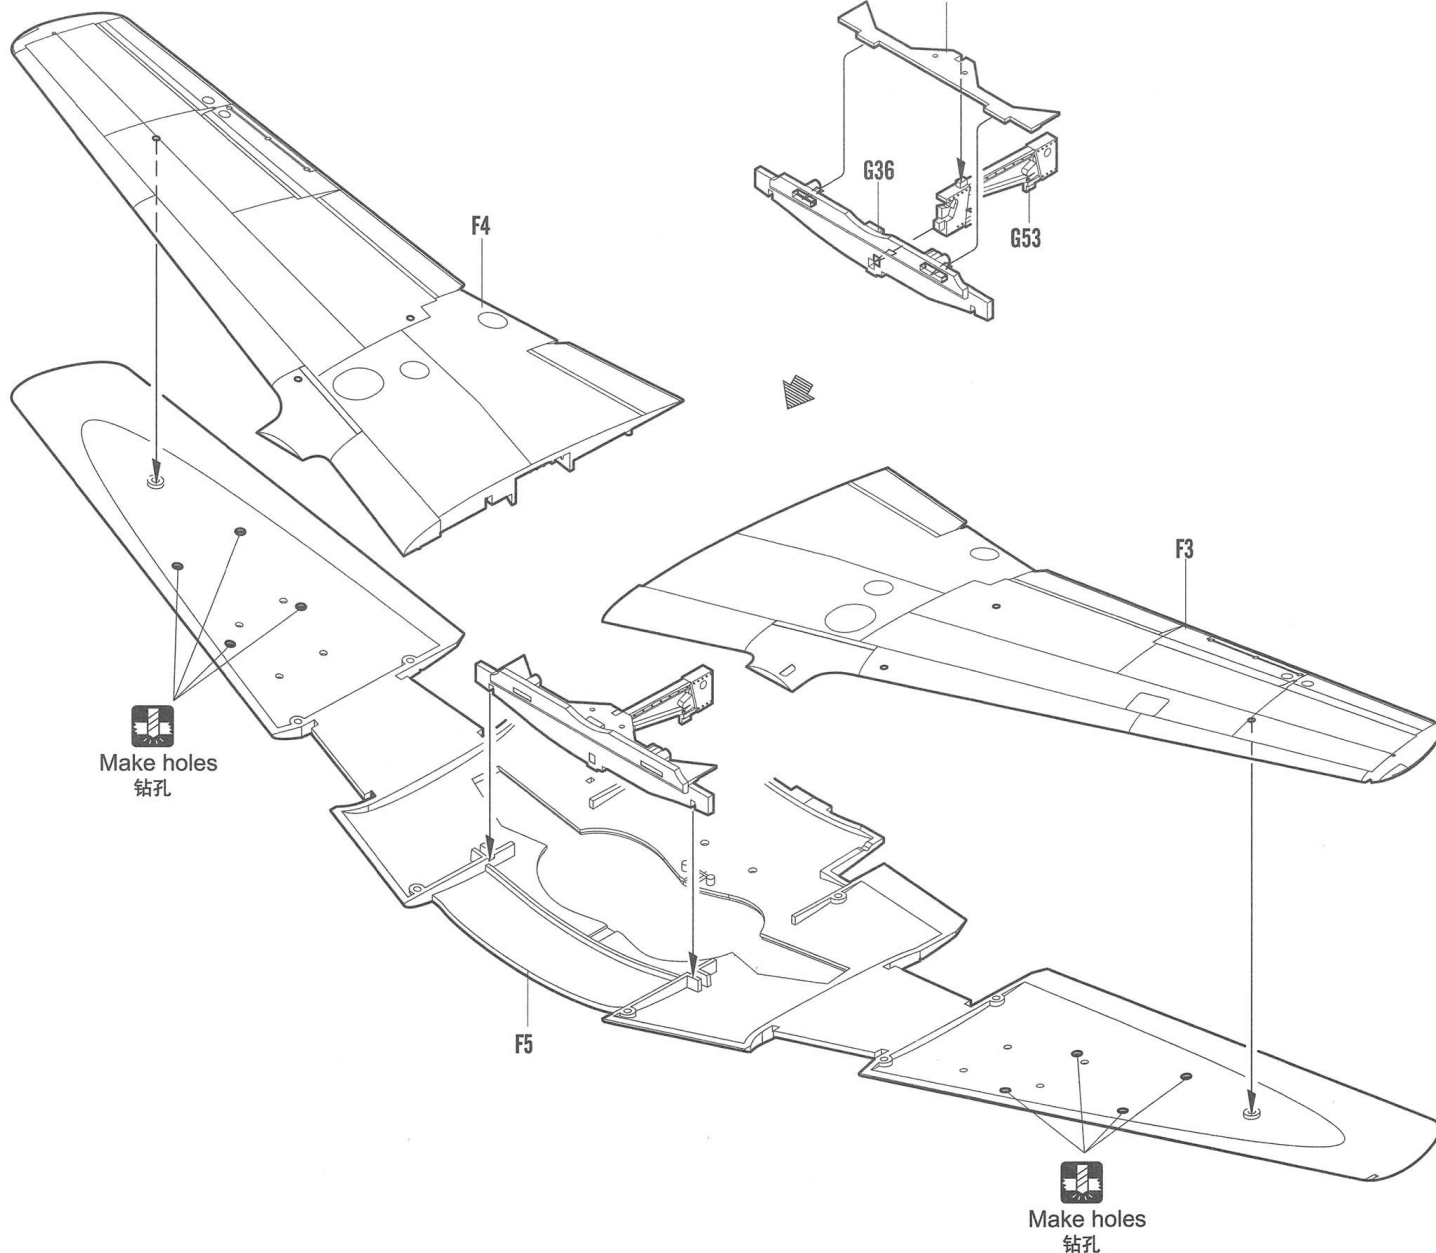




H 116
黑灰色
RLM66 Black Gray

(44)
Decal
贴纸

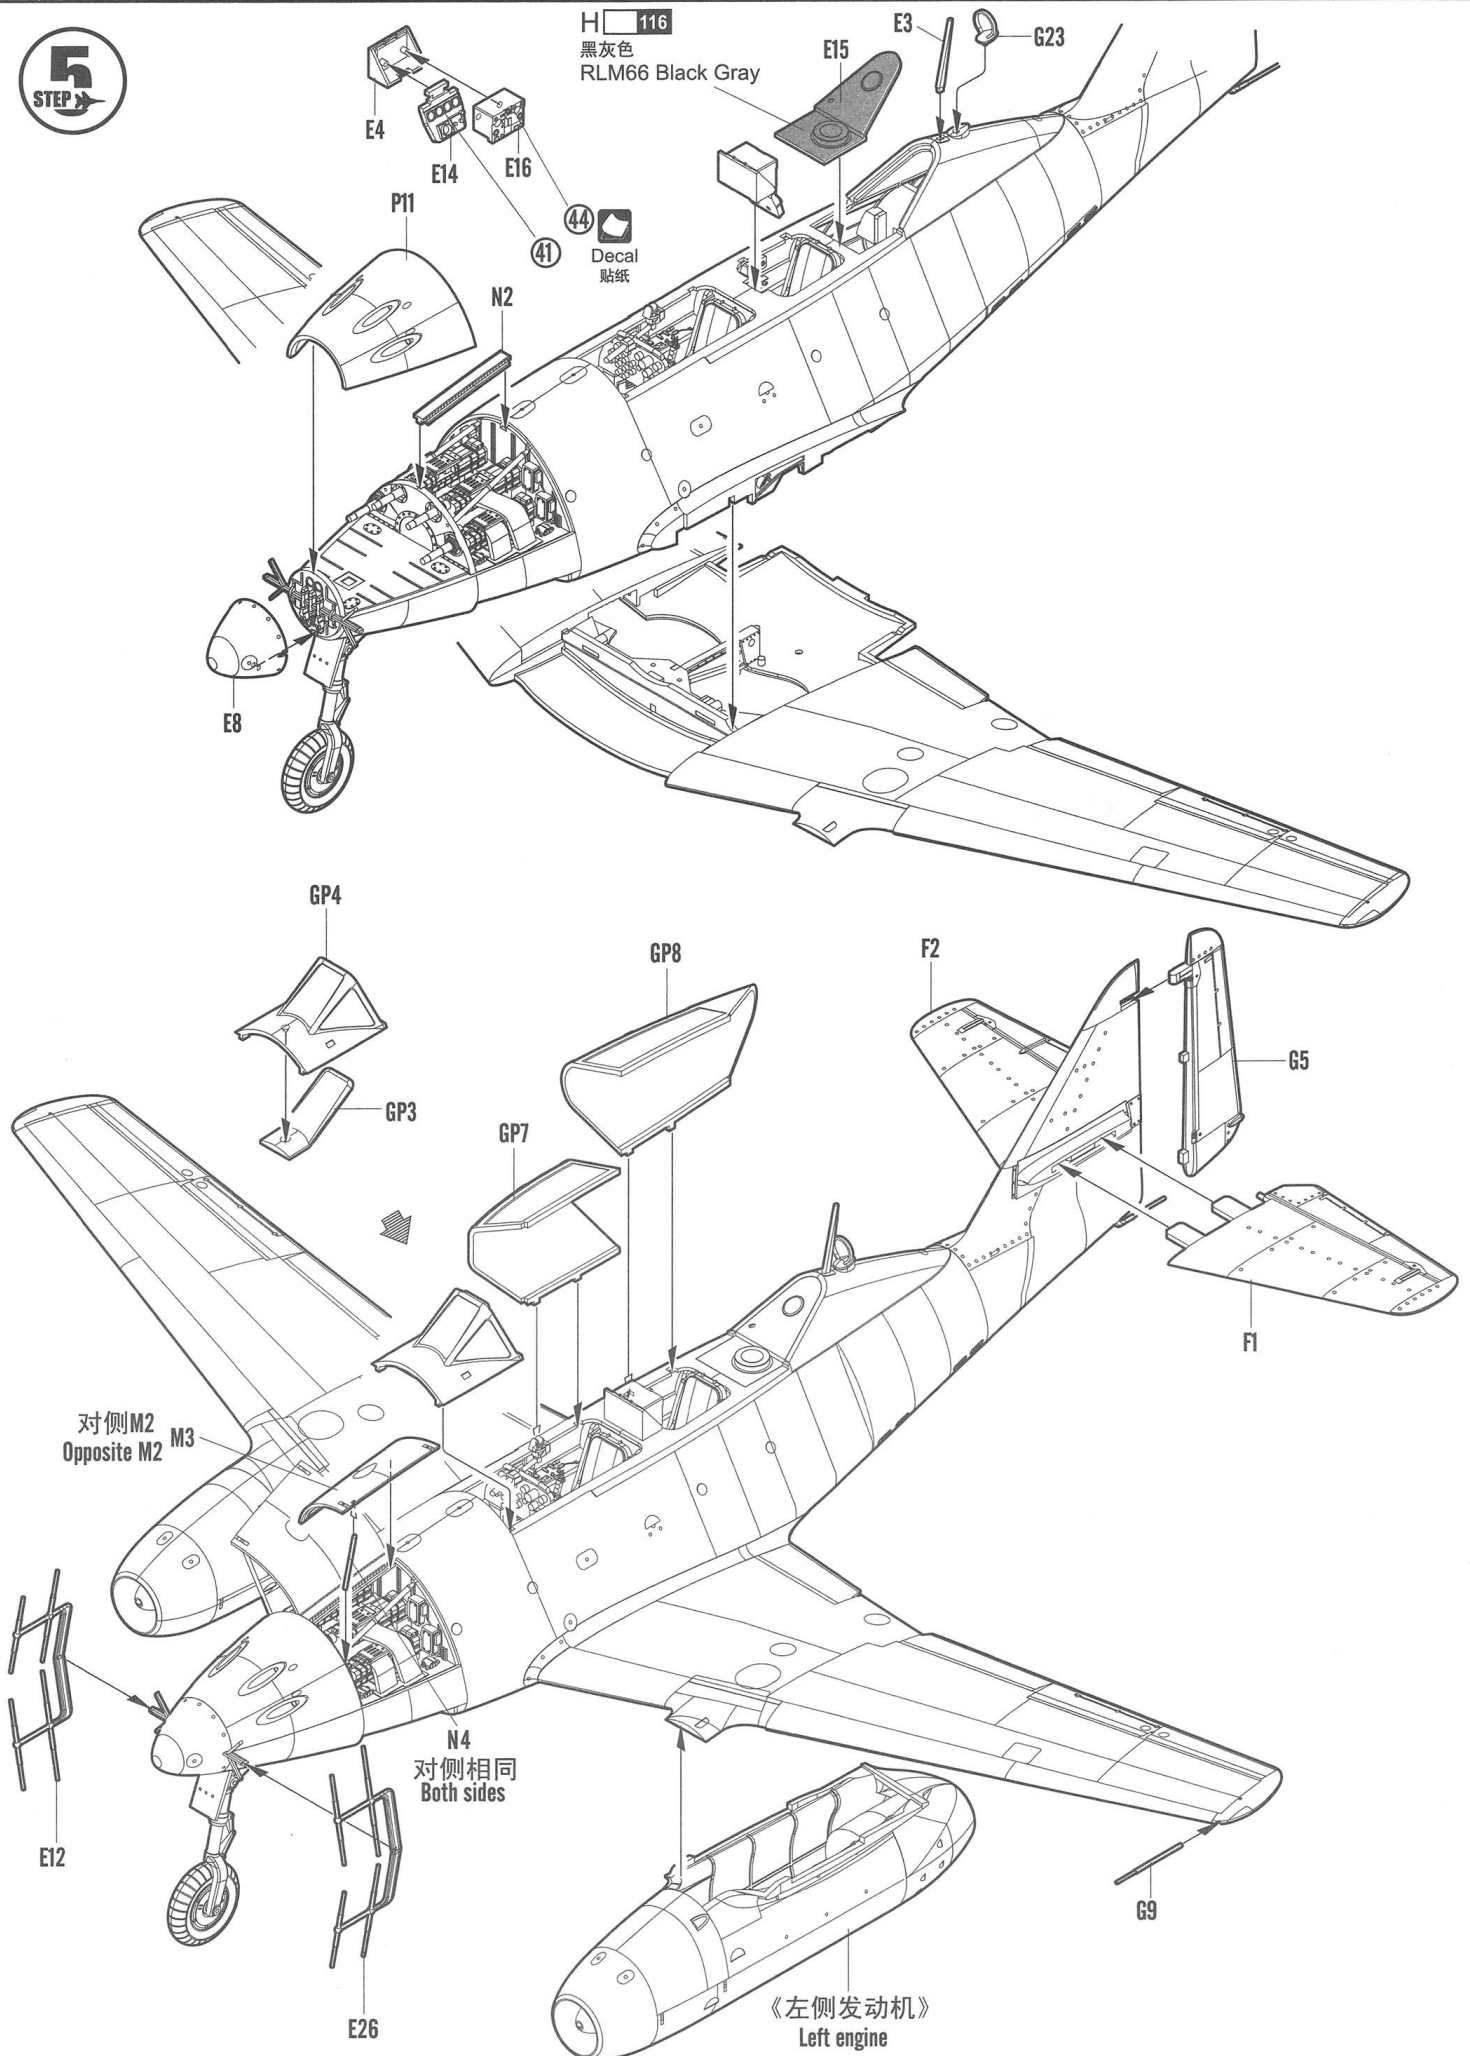




《左侧起落架》
Left undercarriage

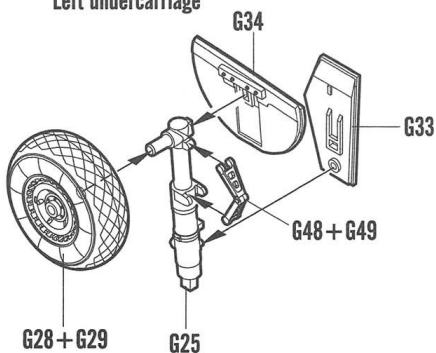

《右侧起落架》
Right undercarriage

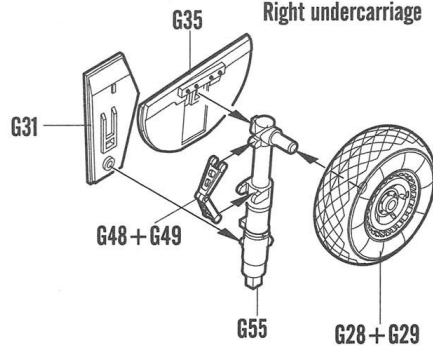


《右侧起落架》
Right undercarriage


G27 对侧相同
Both sides




M6

M5

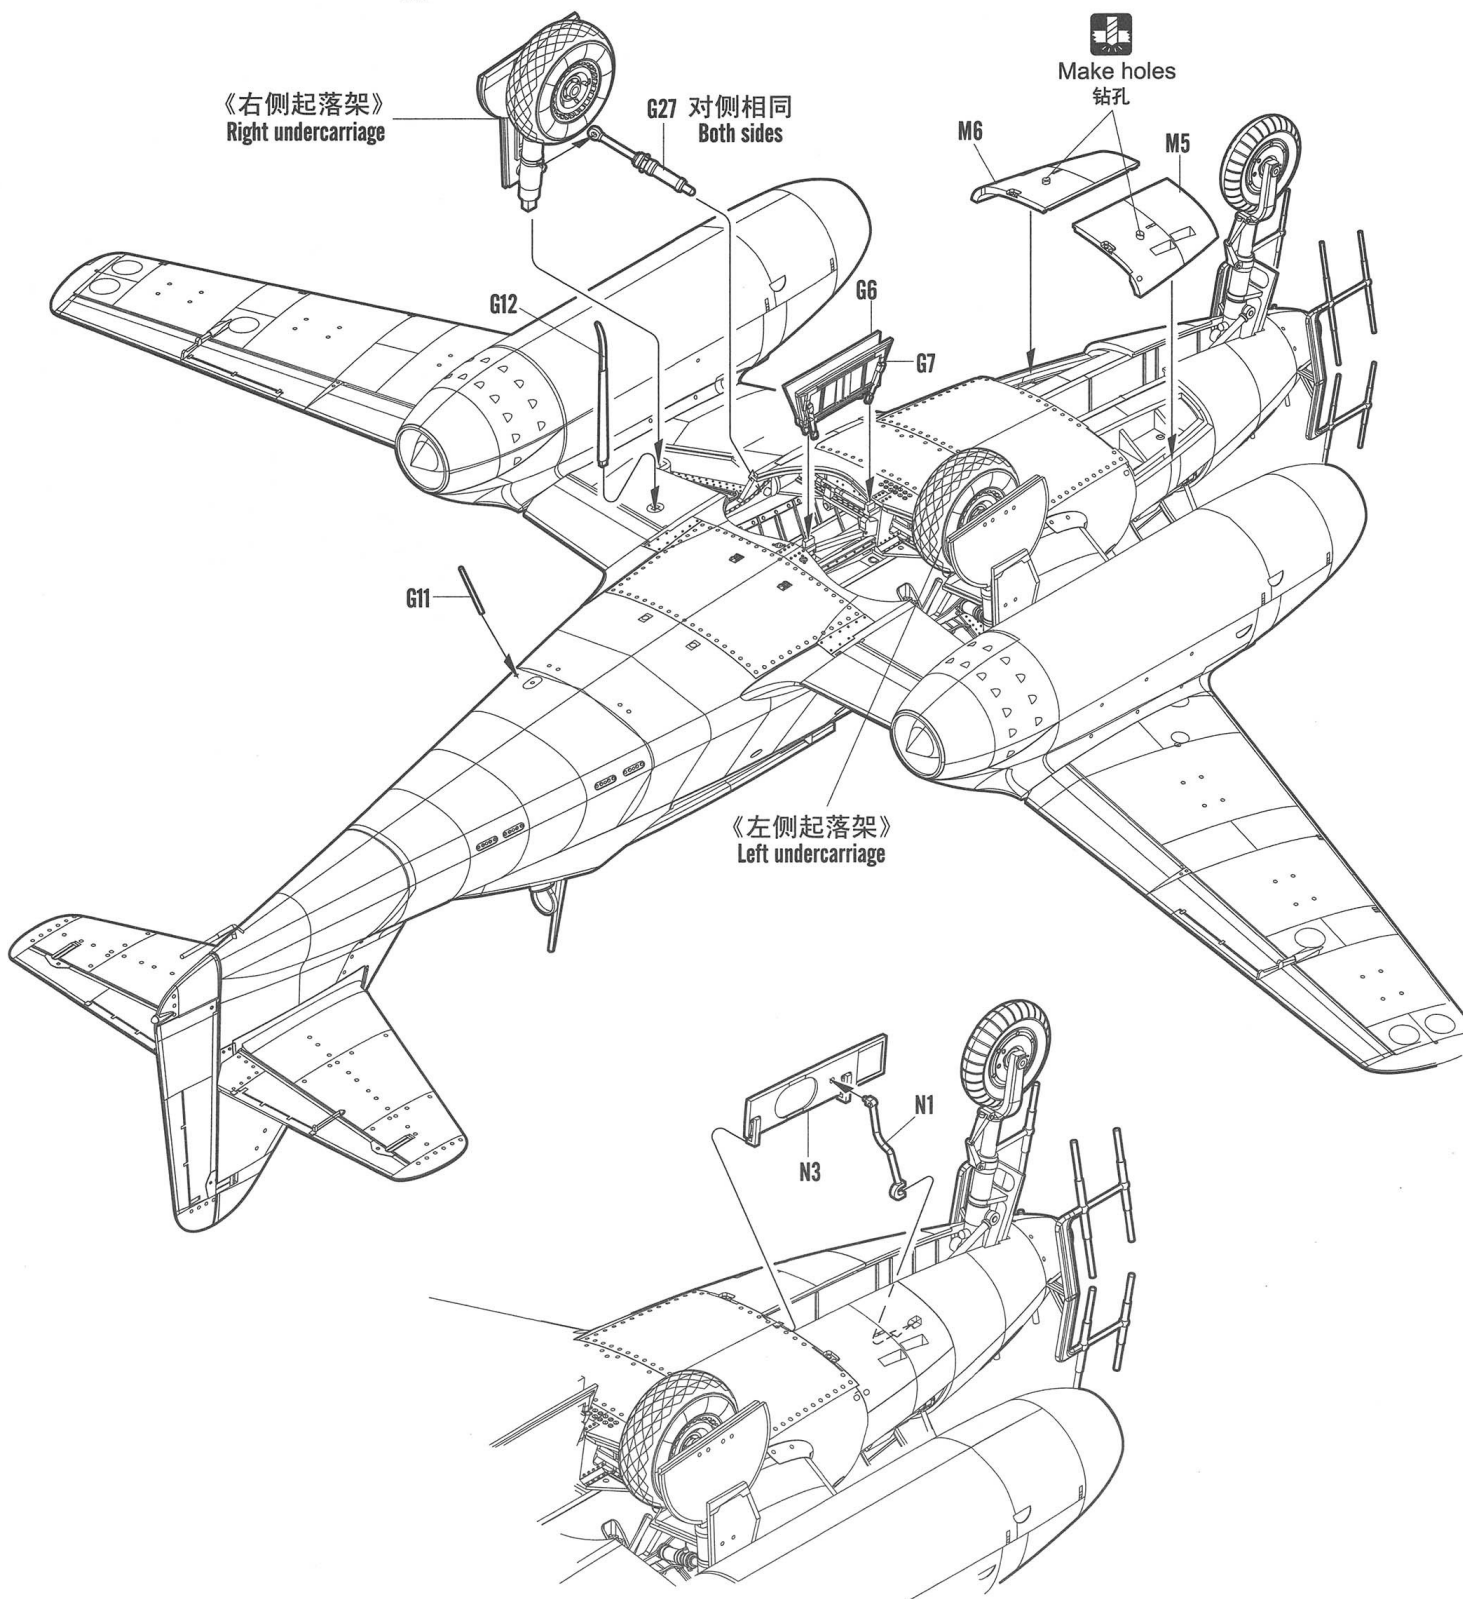

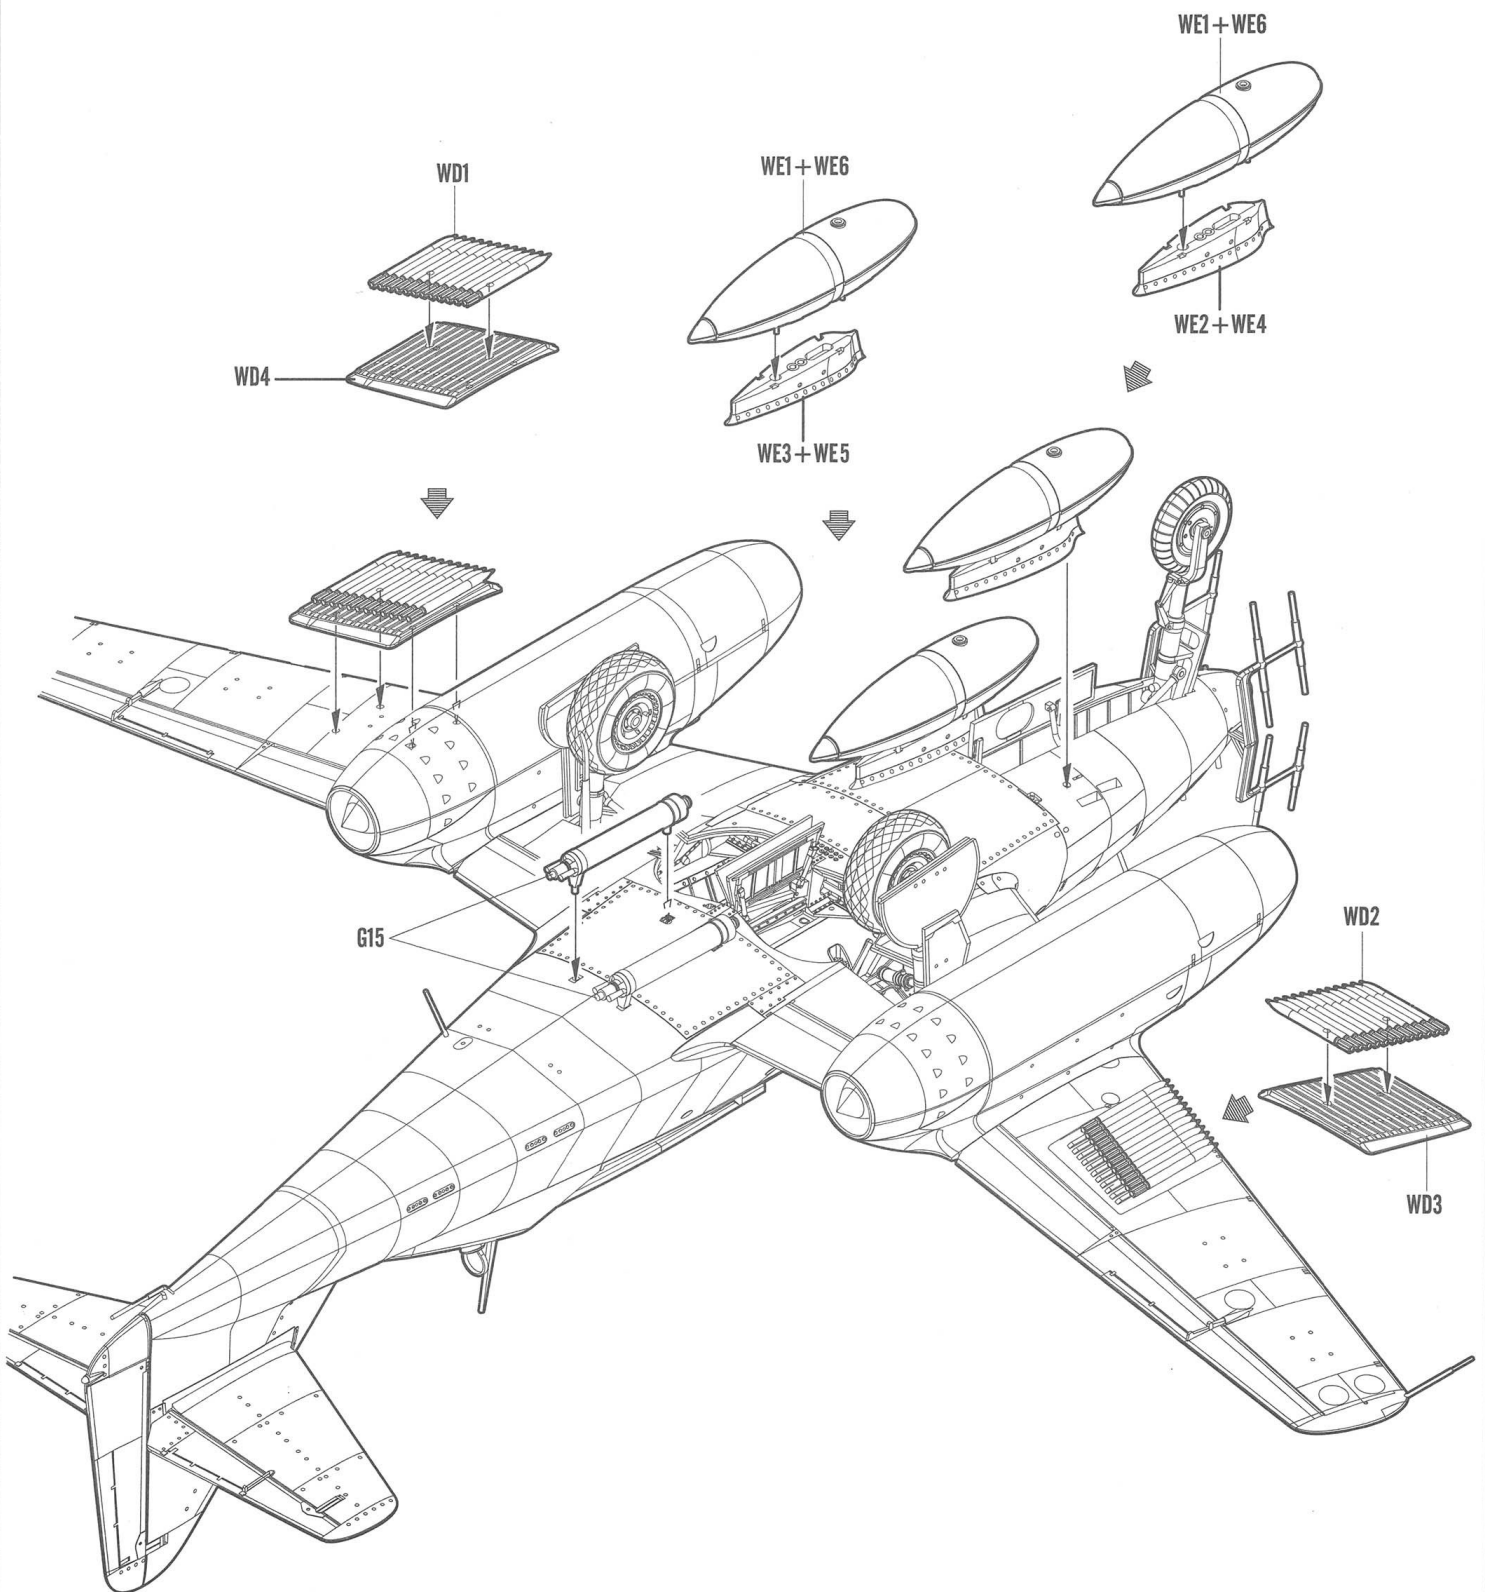


II Me 262 B-1a/U1.pilot-Lt.Herbert Altnr.1945

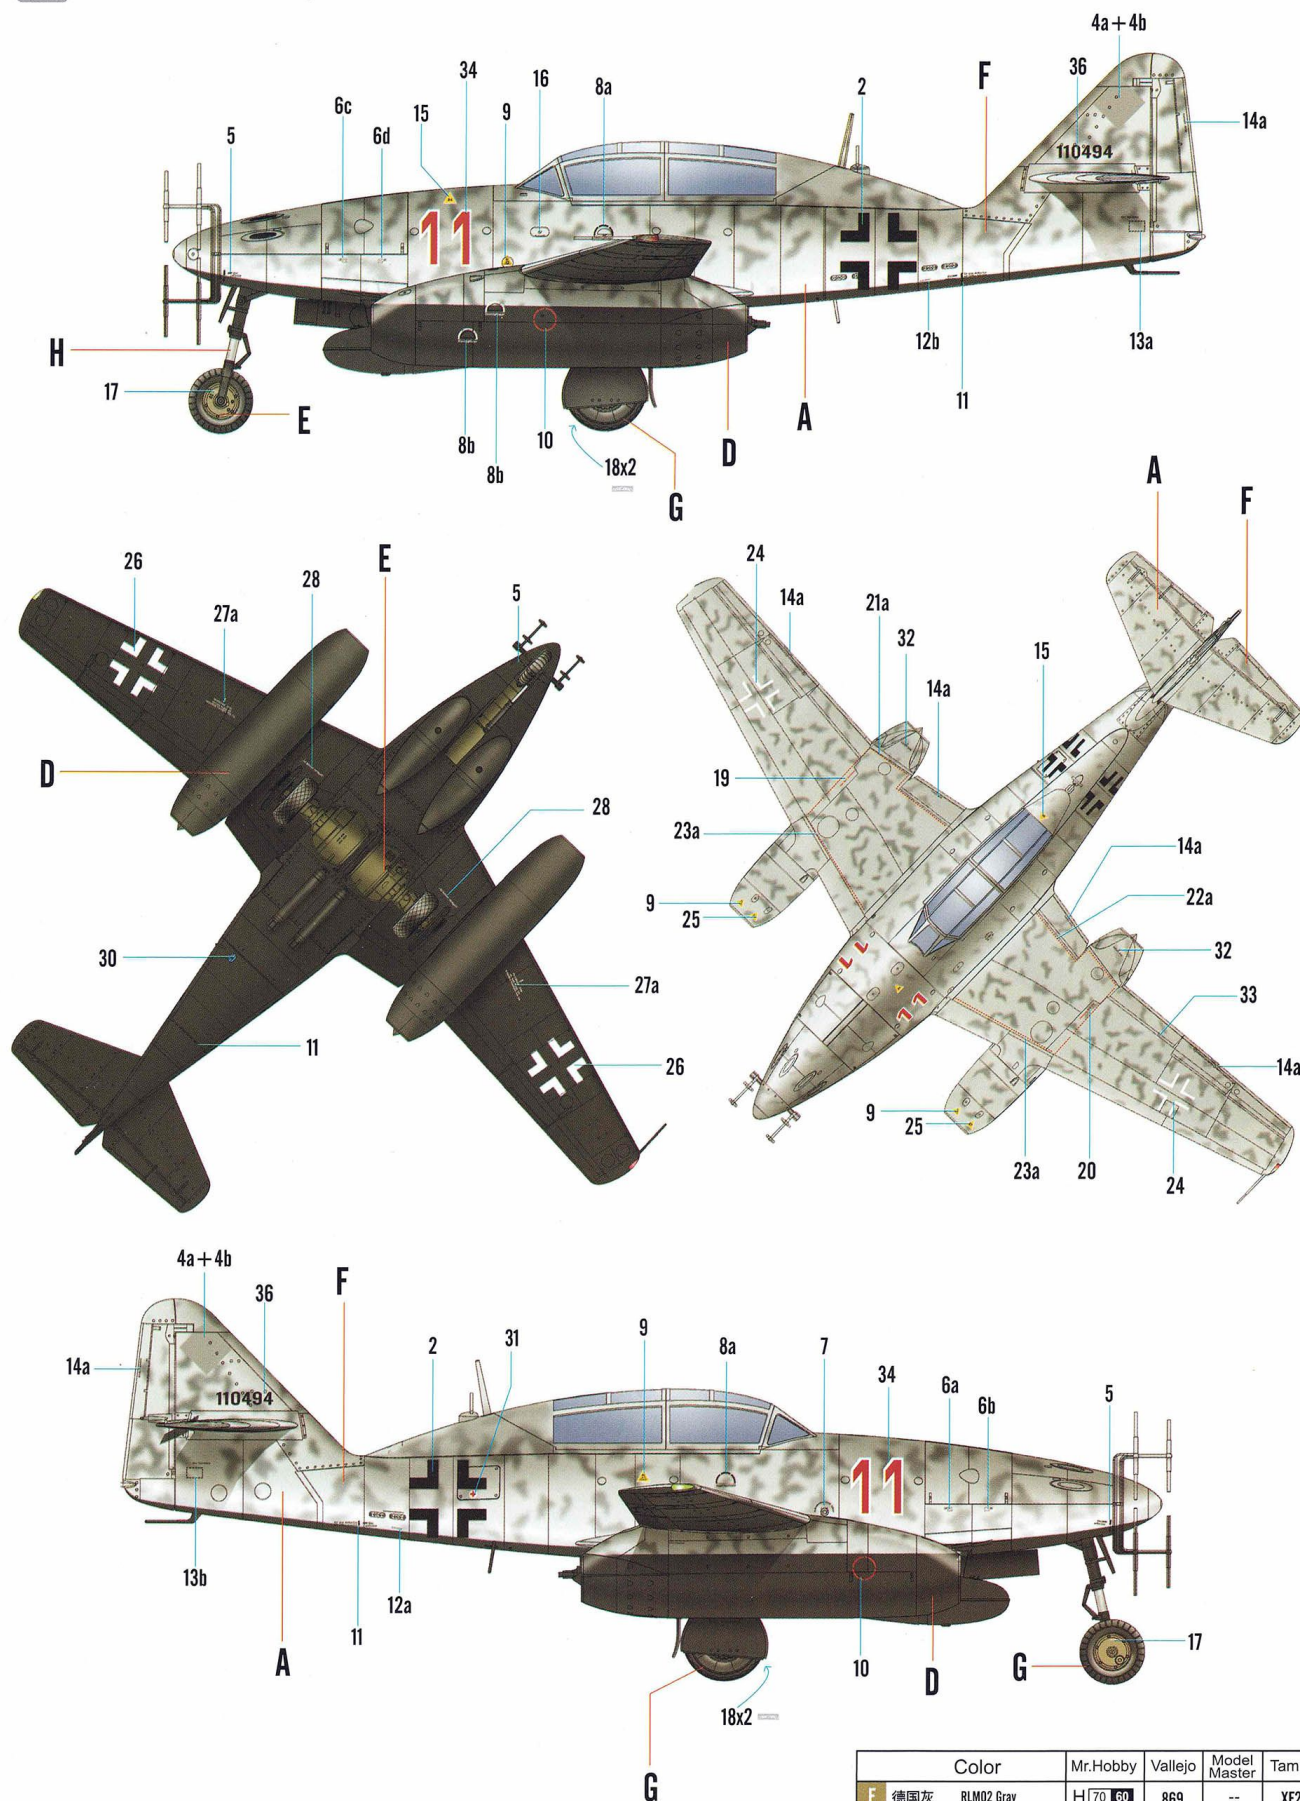

	Color	Mr.Hobby	Vallejo	Model Master	Tamiya	Humbrol
E	德国灰 RLM02 Gray	H[70] 60	869	--	XF22	--
F	灰紫色 RLM75 Gray	H[69] 37	--	--	--	--
G	胎黑色 Tire Black	H[77] 137	--	--	--	--
H	银色 Silver	H[8] 8	997	1546	X11	11

I Germany, 10/NJG 11 'Kommando Welter' 12 (W.Nr. 111980)

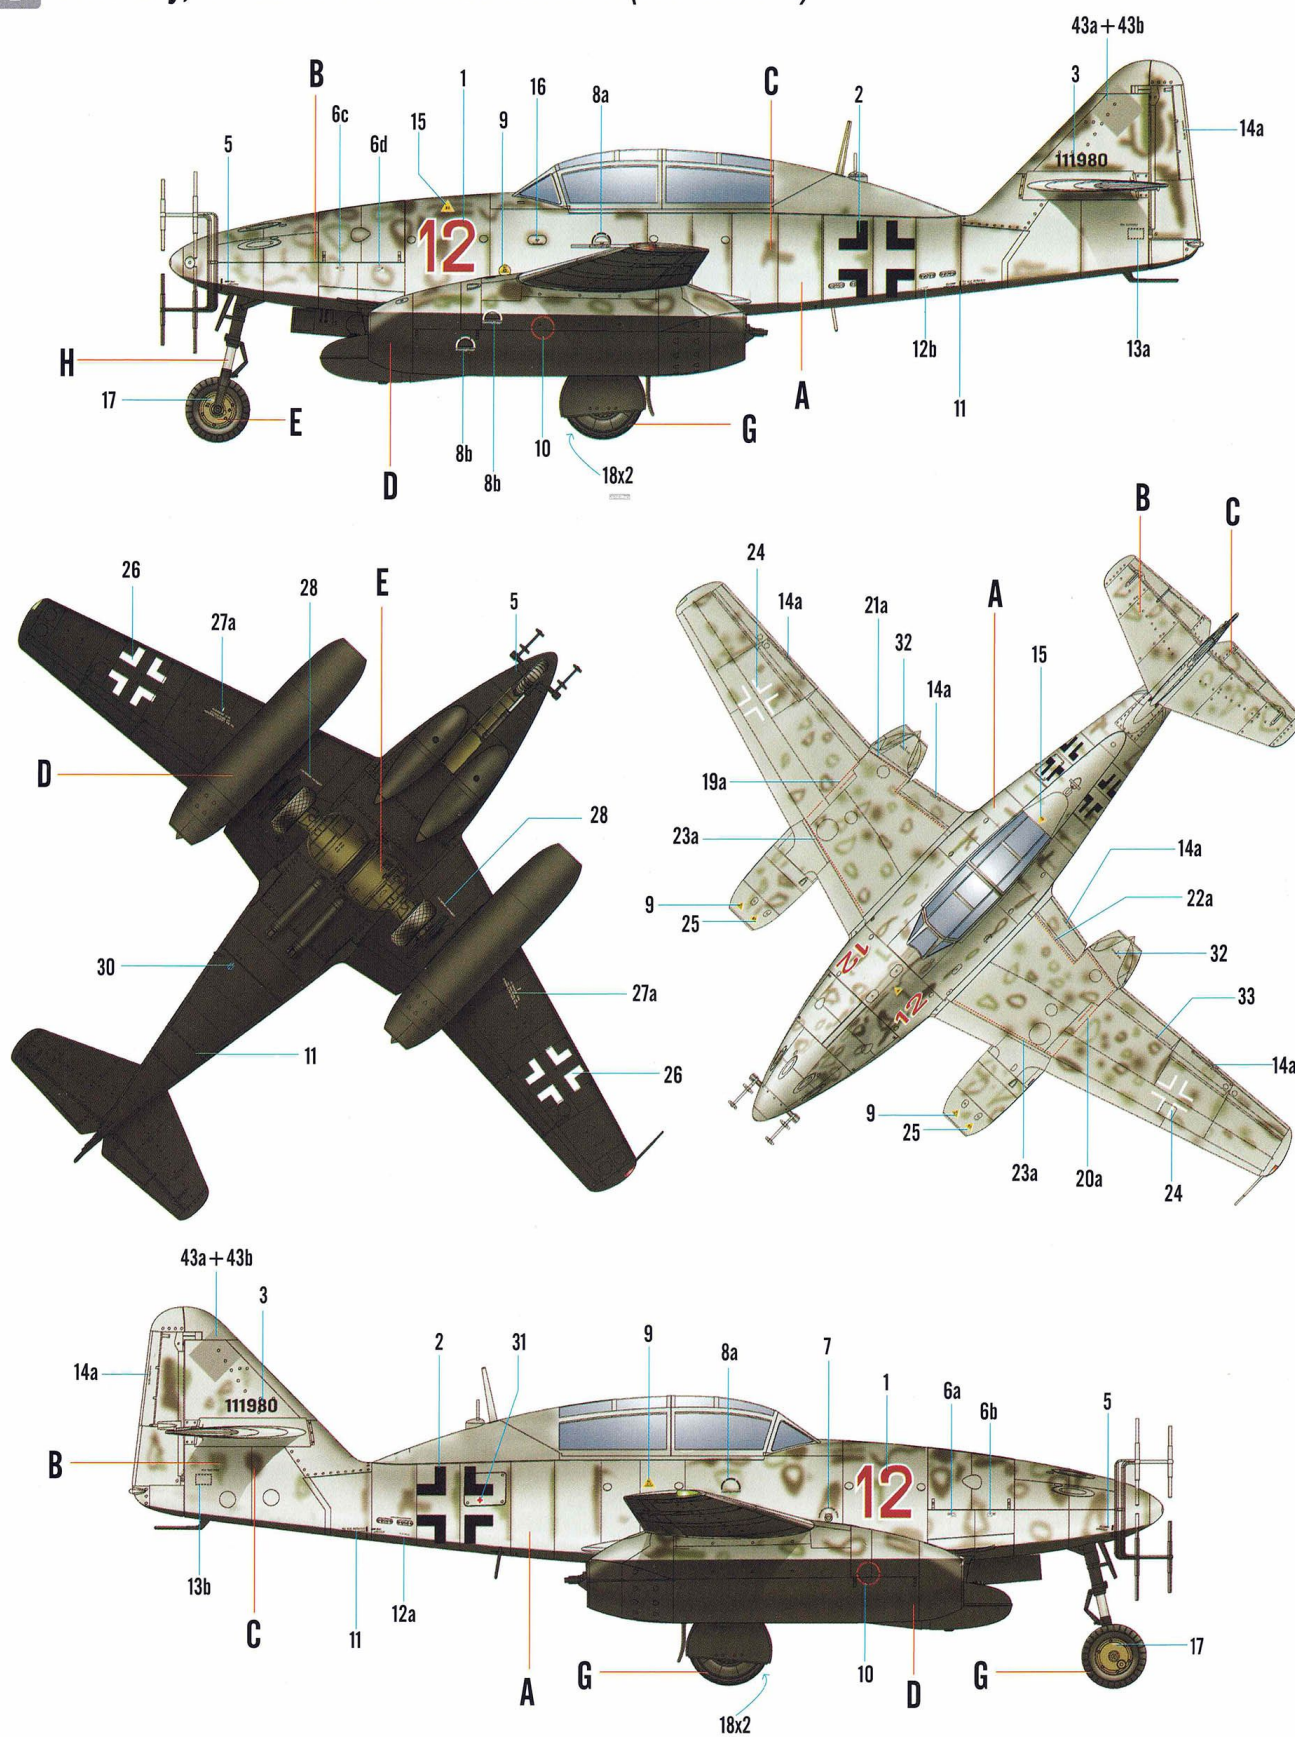

	Color	Mr.Hobby	Vallejo	Model Master	Tamiya	Humbrol
A	浅蓝色 RLM76 Light Blue	H 117	907	1731	--	146
B	深绿色 RLM83 Dark Green	H 123	892	--	--	--
C	棕紫兰 RLM81 Brown Violet	H 121	887	--	XF51	155
D	黑(哑光) Flat Black	H 12 33	950	1749	XF1	33